



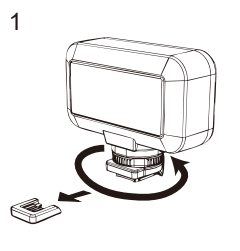 
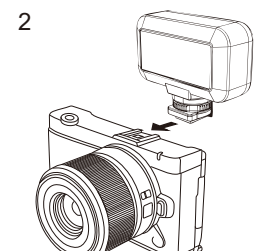 
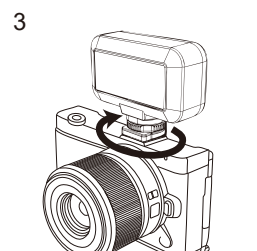 
Thank you for purchasing FlexTally Uni / Tally Light for Nikon Digital Accessory Shoe.
Before using this product, please read this entire manual and save for future reference.

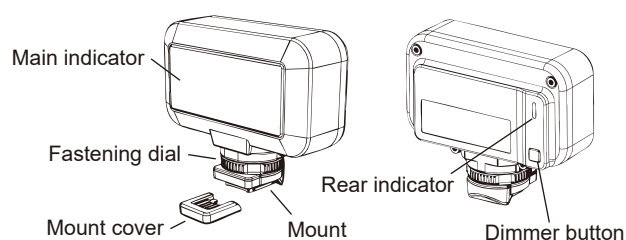
Precautions

-  This product can only be used with Nikon cameras equipped with Digital Accessory Shoe.
Do not mount this product to any camera other than that specified.
-  Do not disassemble or modify this product. Do not attempt to repair this product by yourself.
- Do not use this product under the following conditions or environment:
 - Places exposed to wind from heaters, air conditioners, etc., or sudden temperature change.
 - Places exposed to direct sunlight or high temperature such as in a car under a hot sun.
 - Places exposed to liquids, sea breezes, continuous high humidity, or corrosive atmosphere.
 - Places subjected to strong electromagnetic field, static electricity or strong vibrations.
 - Any other similar conditions.



Attaching and Detaching Instructions

To attach the product to your camera, do as demonstrated below.

- 1  Loosen the fastening dial by turning it counter-clockwise. Remove the cover off the mount.
- 2  Align the mount with the shoe of your camera. Slide in the mount to the shoe.
- 3  Tighten the mount by turning the fastening dial to clockwise.

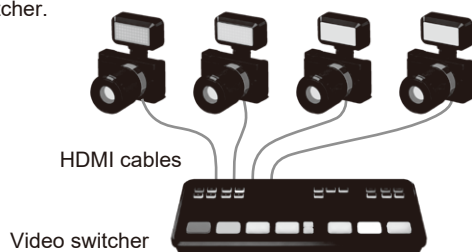


To detach the product from your camera, loosen the fastening dial by turning it counter-clockwise. Slide the product out from the shoe. Place the cover back on to the mounting plate.

-  Before attaching, make sure there is no dust, liquid or other foreign matter on the mount and the shoe. Foreign matter may cause a malfunction or damage the product or camera.
-  Do not use excessive force as this may cause damage the product or camera.

How to Use

This product is a tally light that illuminates in red or green to show the camera recording state. When the camera's HDMI output is connected to a video switcher capable of sending tally control signal back to the camera by HDMI, the tally lights up according to the state of the switcher. The figure below shows an example setup consisting of four cameras and a video switcher.



If the camera is not connected to a switcher, or if the switcher has no capability of such, the tally light will show the camera's REC state instead.

To use the product, simply attach it to the Digital Accessory Shoe of your camera as demonstrated above. The camera will automatically recognize the product. When the product is ready for operation, the rear indicator will light in blue.

Once in operation, while the camera is selected as "ON AIR" or "PREVIEW" by the video switcher, the main indicator will illuminate in red or green, respectively. The main indicator will also illuminate in red if the camera is in "REC" state. Otherwise, the main indicator will turn off. The rear indicator also lights in red or green color according to the tally state.

To change the brightness of the main indicator, press the dimmer button. The brightness can be changed in four levels.

Please note that this product does not work alone, hence the product is powered by and controlled by the camera attached to.

Warranty and Contact Information

The manufacturer hereby warrants only to the purchaser from an authorized dealer, that the product will be free from defects in workmanship and materials for period of one calendar year after the date you purchased the product, under the warranty terms and conditions stated at our website.

Contact: support-global@cerevo.com
Designed and manufactured by Cerevo Inc.
Meitetsu Fudosan Building Floor 2, 3-15 Kandanishiki-cho Chiyoda-ku,
Tokyo Japan <https://cerevo.com>